

SsangYong **V18.60** Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else	
CHAIRMAN	ENGINE CONTROL	3.2 BOSCH	√	√	√	√		√	
		3.6 VDO	√	√	√	√	√	√	
		3.2 VDO	√	√	√	√	√	√	
		2.8 VDO	√	√	√	√	√	√	
		2.3 VDO	√	√	√	√	√	√	
	AUTOMATIC TRANSAXLE	BTRA	√	√	√	√			
		NAG		√	√				
		DC 5 AT(T-Tronic)	√	√	√	√		√	
	TGS LEVER	DC LEVER	√	√	√				
	ANTI-LOCK BRAKE SYSTEM	ABS/ABS 5.3	√	√	√	√	√	√	
		ABS/ABD 5.3	√	√	√	√	√	√	
		ABS/ASR 5.3	√	√	√	√	√	√	
		TEVES(ABS/ESP)	√	√	√	√	√	√	
		TEVES(ABS)		√	√	√	√	√	
	SRS-AIRBAG	BOSCH		√	√				
		SRE-NCS	√	√	√				
	ELEC. CONTROL SUSPENSION	VDO		√	√	√			
		SACHS(NEW CHAIRMAN)		√	√	√			
	EAS		√	√	√	√			
	EPB		√	√	√	√	√		
	IMMOBILIZER		√						
			DSL D27DT	√	√	√	√	√	√
			DSL D27DT(C2I) EURO3)	√	√	√	√	√	√
		DSL D27DT(C3I) EURO4	√	√	√	√	√	√	

SsangYong **V18.60** Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else
REXTON	ENGINE CONTROL(DIESEL)	DSL D20DT(C3I) EURO4	√	√	√	√	√	√
		CDPF(C2I)	√			√		√
		CDPF(C3I)	√			√		√
		D 2.9 SOHC	√	√	√			
	ENGINE CON. (GASOLINE)	3.2 MSE		√	√	√	√	√
		2.8 MSE		√	√	√	√	√
		2.3 MSE		√	√	√	√	√
	AUTOMATIC TRANSAXLE	BTRA 4 A/T		√	√	√		
		DC 5 AT(T-Tronic)	√	√	√	√		√
		DSI 6TH	√	√	√	√		
	TGS LEVER	DC LEVER	√	√	√			
	ANTI-LOCK BRAKE SYSTEM	BOSCH		√	√	√	√	
		TEVES(ABS/ESP)		√	√	√	√	√
		TEVES(ABS)		√	√	√	√	√
		ABS/ABS 5.3	√	√	√	√	√	√
		ABS/ABD 5.3	√	√	√	√	√	√
		ABS/ASR 5.3	√	√	√	√	√	√
	SRS-AIRBAG	SRE-6	√	√	√			
		SRE-NCS	√	√	√			
	FOUR WHEEL DRIVE SYSTEM	NEW PARTTIME(16PIN)	√	√	√	√		
		NEW TOD	√	√	√	√		
		TOD	√	√	√			
	SSPS		√	√	√	√		
HUBER EGR		√	√	√				

SsangYong V18.60 Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else	
	EAS		√	√	√	√			
	EPB		√	√	√	√			
	RK-STICS		√	√	√	√			
MUSSO	ENGINE CON.(GASOLINE)	3.2 MSE	√	√	√	√	√	√	
		2.3 MSE	√	√	√	√	√	√	
		3.2 D A/T	√	√	√	√	√		
		3.2 D M/T	√	√	√	√	√		
		3.2 D A/T, L/D	√	√	√	√	√		
		3.2 D M/T, L/D	√	√	√	√	√		
		2.3 D A/T	√	√	√	√	√		
		2.3 D M/T	√	√	√	√	√		
		2.3 D ASC	√	√	√	√	√		
		2.0 D A/T	√	√	√	√	√		
		2.0 D M/T	√	√	√	√	√		
	2.0 D ASC	√	√	√	√	√			
	AUTOMATIC TRANSAXLE	20PIN CONNECTOR			√	√	√		
		16PIN CONNECTOR			√	√	√		
	ANTI-LOCK BRAKE SYSTEM	ABS 5.0			√	√	√	√	√
		ABS/ABD 5.0			√	√	√	√	√
		ABS/EBD 5.3			√	√	√	√	√
		ABD/EBD 5.3			√	√	√	√	√
	FOUR WHEEL DIRVE SYSTEM	TOD			√	√			
	ELEC. CONTROL SUSPENSION			√	√	√	√	√	
	HUBER EGR			√	√	√			

SsangYong V18.60 Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else
	IMMOBILIZER		√					
KORANDO	ENGINE CON.(GASOLINE)	3.2 MSE		√	√	√	√	√
		2.3 MSE		√	√	√	√	√
		3.2 D A/T	√	√	√	√	√	
		3.2 D M/T	√	√	√	√	√	
		3.2 D A/T, L/D	√	√	√	√	√	
		3.2 D M/T, L/D	√	√	√	√	√	
		2.3 D A/T	√	√	√	√	√	
		2.3 D M/T	√	√	√	√	√	
		2.3 D ASC	√	√	√	√	√	
		2.0 D A/T	√	√	√	√	√	
		2.0 D M/T	√	√	√	√	√	
		2.0 D ASC	√	√	√	√	√	
	AUTOMATIC TRANSAXLE	20PIN CONNECTOR		√	√	√		
		16PIN CONNECTOR		√	√	√		
	ANTI-LOCK BRAKE SYSTEM	ABS 5.0		√	√	√	√	√
		ABS/ABD 5.0		√	√	√	√	√
		ABS/EBD 5.3		√	√	√	√	√
		ABD/EBD 5.3		√	√	√	√	√
	FOUR WHEEL DIRVE SYSTEM	TOD		√	√			
	ELEC. CONTROL SUSPENSION		√	√	√	√	√	
	RK-STICS		√	√	√	√		
	ENGINE CON.(GASOLINE)	2.3 DOHC MANUAL T/M(HFM)	√	√	√			

SsangYong V18.60 Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else
ISTANA		2.3 MSE	√	√	√	√	√	√
	ANTI-LOCK BRAKE SYSTEM	ABS 5.0 FREE RUNNING		√	√	√	√	√
RODIUS	ENGINE CONTROL	DSL D27DT/DSL D20DT	√	√	√	√	√	√
		3.2 MSE	√	√	√	√	√	√
	AUTOMATIC TRANSAXLE		√	√	√	√		√
	ANTI-LOCK BRAKE SYSTEM	TEVES(ABS/ESP)		√	√	√	√	√
		TEVES(ABS)		√	√	√	√	√
	TGS LEVER	DC LEVER	√	√	√			
	SRS-AIRBAG	SRE-NCS	√	√	√			
	FOUR WHEEL DRIVE SYSTEM	NEW PART TIME(16PIN)	√	√	√	√		
		NEW TOD	√	√	√	√		
	EAS		√	√	√	√		
	EPB		√	√	√	√	√	
	RE-STICS		√	√	√	√		
RK-STICS		√	√	√	√			
	ENGINE(DIESEL)	DSL D27DT/DSL D20DT	√	√	√	√	√	√
		DSL D27DT(C2I) EURO3	√	√	√	√	√	√
		DSL D20DT(C2I) EURO3	√	√	√	√	√	√
		DSL D27DT(C3I) EURO4	√	√	√	√	√	√
		DSL D20DT(C3I) EURO4	√	√	√	√	√	√
	ENGINE(GASOLINE)	3.2 MSE	√	√	√	√	√	√
		2.3 MSE	√	√	√	√	√	√
	DC 5 AT(T-TRONIC)	√	√	√	√		√	

SsangYong **V18.60** Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else	
KYRON	AUTOMATIC TRANSAXLE	DSI 6TH	√	√	√	√			
		DSI 4TH		√	√	√			
	ANTI-LOCK BRAKE SYSTEM	TEVES(ABS/ESP)		√	√	√	√	√	
		TEVES(ABS)		√	√	√	√	√	
	SRS-AIRBAG	SRE-NCS	√	√	√				
	FOUR WHEEL DRIVE SYSTEM	NEW PART TIME(16PIN)	√	√	√	√			
		NEW TOD	√	√	√	√			
	SSPS		√	√	√	√			
	EAS		√	√	√	√			
	EPB		√	√	√	√	√		
RK-STICS		√	√	√	√				
ACTYON	ENGINE(DIESEL)	DSL D27DT/DSL D20DT	√	√	√	√	√	√	
		2.3 MSE	√	√	√	√	√		
		DSL D20DT(C2I) EURO3	√	√	√	√	√	√	
		DSL D20DT(C3I) EURO4	√	√	√	√	√	√	
	ENGINE(GASOLINE)	2.3 MSE	√	√	√	√	√	√	
	AUTOMATIC TRANSAXLE	AUTOMATIC TRANSAXLE			√	√	√		
		DSI 6TH	√	√	√	√		√	
		DSI 4TH			√	√	√		
	ANTI-LOCK BRAKE SYSTEM	TEVES(ABS/ESP)			√	√	√	√	√
		TEVES(ABS)			√	√	√	√	√
SRS-AIRBAG	SRE-NCS			√	√				
FOUR WHEEL DRIVE SYSTEM	NEW PART TIME(16PIN)	√	√	√	√				
	NEW TOD	√	√	√	√				

SsangYong **V18.60** Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else
	RK-STICS		√	√	√	√		
CHAIRMAN W	ENGINE CONTROL	G36(VDO)	√	√	√	√	√	
		G32(VDO)	√	√	√	√	√	
		G50(BOSCH)	√	√	√	√	√	
	DRIVE CONTROL SYSTEM	TCU NAG 7TH	√	√	√	√		
		TGS(DURA)	√	√	√	√	√	
	CHASSIS CONTROL SYSTEM	ESP	√	√	√	√	√	
		ECS	√	√	√	√	√	
		ACC	√	√	√	√		
		SSPS	√	√	√	√		
		SAS	√	√	√	√		
		EAS	√	√	√	√	√	
		EPB	√	√	√	√	√	
		TPMS	√	√	√	√		
	BODY CONTROL SYSTEM	BCM(Body Control Module)	√	√	√	√	√	
		FAM(FRONT AREA MODULE)	√	√	√	√	√	
		RAM(REAR AREA MODULE)	√	√	√	√	√	
		DDM(DRIVER DOOR MODULE)	√	√	√	√	√	
		PDM(PASS. DOOR MODULE)	√	√	√	√	√	
		RLDM(REAR LH DOOR MODULE)	√	√	√	√	√	
		RRDM(REAR RH DOOR MODULE)	√	√	√	√	√	
		MFM(MULTI FUNC. MODULE)	√	√	√	√	√	
		PCM(Power Control Module)		√	√			
		ICM(Cluster)				√	√	

SsangYong V18.60 Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else	
		DSM(DRIVER SEAT MODULE)	√	√	√	√	√		
		PSM(PSAA. SEAT MODULE)	√	√	√	√	√		
		RSM(REAR SEAT MODULE)	√	√	√	√	√		
		FATC	√	√	√				
		GWM(GATE WAY MODULE)	√	√	√				
		RASM(REAR ARMREST MODULE)	√	√	√				
		AIRBAG	√	√	√				
	AV SYSTEM	CDM(Harmannavis)	√	√	√	√			
		CD(KalosNett)	√	√	√				
		AMP	√	√	√				
		TV TUNER	√	√	√				
		DMB	√	√	√				
	KORANDO C	ENGINE(DIESEL)	D20DTF	√	√	√	√	√	
		AUTOMATIC TRANSAXLE	DSI 6TH	√	√	√	√		
		CHASSIS CONTROL SYSTEM	MANDO(ABS/ESP)	√	√	√	√	√	
E-Coupling			√	√	√	√			
EPS			√	√	√	√			
BODY CONTROL SYSTEM		BCM(Body Control Module)	√	√	√	√	√		
		SKM	√	√	√	√			
	AIRBAG	√	√	√					
KORANDO SPORTS	ENGNE(DIESEL)		√	√	√	√	√		
	AUTOMATIC TRANSAXLE	DSI 6TH	√	√	√	√			
	FOUR WHEEL DRIVE SYSTEM	NEW P/TIME(16PIN)	√	√	√	√			

SsangYong **V18.60** Diagnostics List (Note:For reference only)

Vehicle	System	Sub system	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Else
	CHASSIS CONTROL SYSTEM	MANDO(ABS/ESP)	√	√	√	√	√	
	BODY CONTROL SYSTEM	AIRBAG	√	√	√			
		RK-STICS	√	√	√	√		
KORANDO TURISMO	ENGINE		√	√	√	√	√	√
	AUTOMATIC TRANSAXLE		√	√	√	√		√
	ANTI-LOCK BRAKE SYSTEM	ESP (TEVES)	√	√	√	√	√	√
		ABS (TEVES)	√	√	√	√	√	√
	AIRBAG		√	√	√			
	BODY CONTROL MODULE		√	√	√	√	√	√
	Smart Key System		√	√	√	√		

(*):Tested;

(?):Manual on website(www.x431.com)

The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.