





















**Euro Ford V41.80 Diagnostics List(Note:For reference only)**

menu select	Year	Model	PCM	TCM	ABS	RCM/IAB	BCMII/GEM	ICM/IPC	EATC/HVAC	NAV	EPS	PAM/PBM	ACM	DDM	PDM	RLDM	RRDM	RKE	HCM	GDM	PATS/CSM	HEC	CDP	FACM	EPB	AHCM	CCMII/ICCM	CMR	DSM	ECS	FFH	FIP	ICU	RETM	RFA	RHI/D	SRM	TBM	TRM	VDM
-------------	------	-------	-----	-----	-----	---------	-----------	---------	-----------	-----	-----	---------	-----	-----	-----	------	------	-----	-----	-----	----------	-----	-----	------	-----	------	------------	-----	-----	-----	-----	-----	-----	------	-----	-------	-----	-----	-----	-----

Note:

C:DTC reading and clearing  
D:Data Display  
T:Action Test  
PMI:Programmable module installation  
PATS:Passive anti theft system functions  
FICF:Fuel Injector Correction Factors  
OW:Odometer write  
KP:Key Program  
IP:Injector program  
DPF:Diesel Particulate Filter Reset and Regeneration  
ESC:ESP sensor calibration  
EPBC:EPB calibration  
SF:Service Functions  
TPMS:TPMS Reset  
BC:BCMii Configuration  
RC:RCM Configuration  
RFAT:Refill the fuel Additives tank  
LCTP:Learn Clutch Touch Point  
ASB:ABS service bleed  
IVD:IVD Initialization Sequence

(\*):Tested;  
(?):Manual on website(www.x431.com)

All description rights reserved by LAUNCH TECH.CO.,LTD  
元征公司保留最终解释权