

JAGUAR V19.00 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	RCM	IP	AD	BCM	BC	HVA	PBM	TPM	PAM	CCM	AU	G	D	D	P	P	R	R	D	S	S	H	G	R	G	A	I	O	V	K	K	I	S	I	I	S	A	A	N	S	T	T	A	D	V	F	
								CM	MB	C							M	M	M	M	M	M	M	LR	AB	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M

S21: Throttle valve actuator (Diesel)

S22: Brake bleed

S23: Stepper motor initialisation

S24: Exhaust gas recirculation valve

S25: Reset water in fuel detection

S26: Turbine shut-off valve

S27: Oxygen sensor

S28: Oxidation catalyst

S29: Battery replacement

S30: Pedestrian impact crash status reset

S31: Steering column calibration

S32: High pressure injection pump replacement

S33: Sunroof calibration

S34: Fuel lift pump

S35: Diesel particulate filter differential pressure sensor replacement

S36: Diesel fueling adaption re-initialization

S37: Fuel prime routine

S38: Display injector correction factors

S39: Purge valve self test

S40: Yaw rate sensor calibration

S41: Vent actuators test

S42: Restraints build mode

S43: Rest of world - Service interval options

S44: Speed control alignment

S45: Control module calibration

S46: Tire size (rolling circumference)

S47: Headlamp control module system calibration

S48: Navigation reset

S49: Side object detection configuration - Right

S50: Side object detection configuration - Left

S51: Dynamic safety belt retract and release - SPMA

S52: Dynamic safety belt retract and release - SPMB

S53: Clear module learn data - SPMA

S54: Clear module learn data - SPMB

S55: Seat cushion replacement

S56: DVD region counter reset

S57: Calibrate dynamic volume control

S58: Idle speed adjustment

S59: Idle speed test

S60: Driver's seat calibration

S61: Passenger's seat calibration

JAGUAR V19.00 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	RCM	IP	AD CM	BCM	BC MB	HVA C	PBM	TPM	PAM	CCM	AU	G S	D M	D S	P M	P S	R M	R S	G T	D C	S D	S O	S P	H C	G E	R D	G W	A H	I C	O C	V I	K V	K T	I C	S L	I C	I S	S C	A A	A C	N C	S R	T E	T V	A P	D A	V A	F C
-------	------	----------	-----	-----	-----	-----	----	-------	-----	-------	-------	-----	-----	-----	-----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

- S62: Rear seat calibration - Right
- S63: Rear seat calibration - Left
- S64: Tailgate/trunk calibration
- S65: Passenger restraint disable switch
- S66: Mirror personalisation features
- S67: Paddle shift configuration
- S68: Transportation mode
- S69: Fuel pump supply - Enable/disable
- S70: Calibration learn
- S71: Build mode
- S72: Valet mode reset
- S73: Test dual battery system
- S74: Verify secondary battery charging
- S75: Quiescent current control module internal check
- S76: Evaporator and heater test
- S77: Injector valve test
- S78: Speed control internal state
- S79: Air conditioning system adaption reset
- S80: Diesel particulate filter condition (stored values)
- S81: Vehicle reset
- S82: Alarm trigger history
- S83: Side object detection module history
- S84: Side object detection module history
- S85: OBDII readiness tests
- S86: Service history data
- S87: Headlamp and axle sensor calibration
- S88: Lateral accelerometer calibration
- S89: Pressure sensor calibration
- S90: Longitudinal accelerometer calibration
- S91: Parking brake pad replacement - Exit maintenance mode application
- S92: Parking brake activation
- S93: Odometer calibration
- S94: Engine control module unlock application
- S95: Steering angle sensor calibration

- S96: Key programming
- S97: Erase all existing keys
- S98: Verify Keys
- S99: Check all antennas
- S100: Immobiliser Antenna Unit Functionality Check
- S101: Add additional keys

JAGUAR V19.00 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	RCM	IP	AD CM	BCM	BC MB	HVA C	PBM	TPM	PAM	CCM	AU	G M	D M	D M	P M	P M	R M	R M	D M	D M	S M	S M	H M	G M	R M	D M	G M	A M	H M	I M	O M	V M	K M	K M	I M	S M	I M	I M	S M	A M	A M	N M	S M	T M	T M	A M	D M	V M	F M
-------	------	----------	-----	-----	-----	-----	----	----------	-----	----------	----------	-----	-----	-----	-----	----	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------

S102: Replace faulty/lost keys

S103: Recover programmed keys

S104: Check passive keys enabled

S112: Height calibration

S113: Set/un-set air suspension manufacturing/freeze mode

S114: Set/un-set air suspension geometry set-up

S115: Set/un-set air suspension tight tolerance mode (headlamp setting)

S116: Air suspension inflation

S117: Air suspension deflation

S128: Front control display interface module - Graphics update

(?):Manual on website(www.x431.com)

Note:All description rights reserved by LAUNCH TECH.CO.,LTD

