

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHC M	VIC M	GW M	DD M	DS M	PDM	PSM	ATC M	TCC M	ADC M	SCM	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SO DCM L	SO DCM R	GSM	Manual Oil Reset
	2014 - 2015	3.0L Diesel V6	CD S19 S47 S48 S50 S52 S58 S74 S75 S76 S77 S81 S82 S88 S108	CD	CD	CD S109	CD S132	CD S116	CD S133 S104	CD S137 S36 S55 S63 S83 S89 S94 S102 S133	CD S149 S152 S79 S80		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD S84	CD S157 S59	CD S37	CD S39	CD S38	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD	CD S150 S110 S111	CD	CD S129	CD S128	CD S126	CD S130	CD	CD	CD	CD	MOR			
	2014 - 2015	4.4L Diesel V8	CD S19 S47 S48 S50 S52 S58 S74 S75 S76 S77 S81 S82 S88 S108	CD	CD	CD S109	CD S132	CD S116	CD S133 S104	CD S137 S36 S55 S63 S83 S89 S94 S102 S133	CD S149 S152 S79 S80		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD S84	CD S157 S59	CD S37	CD S39	CD S38	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD	CD S150 S110 S111	CD	CD S129	CD S128	CD S126	CD S130	CD	CD	CD	CD	MOR			
	2014 - 2015	2.0L Petrol GTDi	CD S19 S14 S30 S134	CD	CD	CD S109	CD S132	CD S116	CD S133 S104	CD S137 S36 S55 S63 S83 S89 S94 S102 S133	CD S149 S152 S79 S80		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD S84	CD S157 S59	CD S37	CD S39	CD S38	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD	CD S150 S110 S111	CD	CD S129	CD S128	CD S126	CD S130	CD	CD	CD	CD	MOR			

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHC M	VIC M	GW M	DD M	DS M	PDM	PSM	ATC M	TCC M	ADC M	SCM	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SO DCM L	SO DCM R	GSM	Manual Oil Reset
		Diesel V6	CDV S58, S46, S52, S74, S75, S81, S88	CDV S14	CDV	CDV S109	CDV S132		CDV S55, S56, S83, S89, S94, S36	CDV S43 S102 S104	CDV		CDV		CDV S86, S87, S91, S92, S93	CDV S95	CDV		CDV		CDV S39	CDV S38	CDV	CDV	CDV S123	CDV S105	CDV			CDV	CDV		CDV S110 S111	CDV S96	CDV S125	CD	CD	CDV S130	CDV S127	CD	CD			
		Supercharged V6	CD S19 S14 S30 S58 S134	CD	CD	CD S109	CD S132 S116		CD S36 S55 S63 S83 S89 S94 S133 S137 S104	CD S44 S45 S79 S149 S152	CD		CD		CD S92 S86 S87 S91 S95	CD S144	CD	CD	CD	CD	CD S157	CD	CD S39	CD	CD S145	CD	CD	CD	CD	CD S26 S64	CD S27	CD	CD S54 S66	CD S110 S150	CD S59 S125	CD S128	CD	CD S130	CD	CD	CD	MOR		
		Supercharged V8	CD S19 S14 S30 S58 S134	CD	CD	CD S109	CD S132 S116		CD S36 S55 S63 S83 S89 S94 S133 S137 S104	CD S44 S45 S79 S149 S152	CD		CD		CD S92 S86 S87 S91 S95	CD S144	CD	CD	CD	CD	CD S157	CD	CD S39	CD	CD S145	CD	CD	CD	CD	CD S26 S64	CD S27	CD	CD S54 S66	CD S110 S150	CD S59 S125	CD S128	CD	CD S130	CD	CD	CD	MOR		
		Normally aspirated V8	CD S19 S14 S30 S58 S134	CD	CD	CD S109	CD S132 S116		CD S36 S55 S63 S83 S89 S94 S133 S137 S104	CD S44 S45 S79 S149 S152	CD		CD		CD S92 S86 S87 S91 S95	CD S144	CD	CD	CD	CD	CD S157	CD	CD S39	CD	CD S145	CD	CD	CD	CD	CD S26 S64	CD S27	CD	CD S54 S66	CD S110 S150	CD S59 S125	CD S128	CD	CD S130	CD	CD	CD	MOR		

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHC M	VIC M	GW M	DD M	DS M	PDM	PSM	ATC M	TCC M	ADC M	SCM	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFCM	SO DCM L	SO DCM R	GSM	Manual Oil Reset
	2014 - 2015	3.0L Diesel V6	CD S19 S47 S48 S50 S52 S58 S74 S75 S76 S77 S81 S82 S108	CD	CD	CD S109	CD S132	CD S116	CD S36 S55 S63 S83 S89 S94 S133 S137	CD S44 S45 S102 S152	CD S79 S149		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD	CD	CD S157	CD	CDV S39	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD S66	CD S110 S150	CD S59	CD S125	CD S128	CD	CD S130	CD	CD	CD	CD	MOR			
		4.4L Diesel V8	CD S19 S47 S48 S50 S52 S58 S74 S75 S76 S77 S81 S82 S108	CD	CD	CD S109	CD S132	CD S116	CD S36 S55 S63 S83 S89 S94 S133 S137	CD S44 S45 S102 S152	CD S79 S149		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD	CD	CD S157	CD	CDV S39	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD S66	CD S110 S150	CD S59	CD S125	CD S128	CD	CD S130	CD	CD	CD	CD	MOR			
		2.0L Petrol GTDi	CD S19 S30 S58 S134	CD	CD	CD S109	CD S132	CD S116	CD S36 S55 S63 S83 S89 S94 S133 S137	CD S44 S45 S102 S152	CD S79 S149		CD		CD S92 S86 S87 S91	CD S95	CD S144	CD	CD	CD S157	CD	CDV S39	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD S66	CD S110 S150	CD S59	CD S125	CD S128	CD	CD S130	CD	CD	CD	CD	MOR			

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHC M	VIC M	GW M	DD M	DS M	PDM	PSM	ATC M	TCC M	ADC M	SC M	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SO DCM L	SO DCM R	GS M	Manual Oil Reset	
		Hybrid	CD S19 S47 S48 S50 S52 S58 S74 S75 S76 S77 S81 S82 S108	CD	CD	CD S109	CD S132	CD S116	CD S137 S104	CD S36 S55 S63 S83 S89 S94 S133 S102 S149 S152	CD S44 S79	CD S79 S149			CD S92 S87 S91	CD S95	CD S144	CD	CD S157	CD	CDV S39	CD S145	CD	CD	CD S105	CD S64	CD S26 S27	CD S54	CD S66	CD S110 S150	CD S59 S125	CD S128	CD	CD S130	CD	CD	CD	CD	CD	CD	MOR				
Range Rover Evoque	2012 - 2013	Petrol (2.0L)	CDV, S14, S108, S30, S75, S98, S115, S131	CDV, S85, S14	CDV, S18, S22, S33, S34	CDV, S109	CDV, S19, S132		CDV, S55, S56, S59, S63	CDV, S80, S79, S112		CDV			CDV, S86, S87, S93	CDV	CDV	CDV, S84, S107	CDV		CDV, S37	CDV	CDV	CDV	CDV	CDV, S43	CDV				CDV, S54	CDV, S66	CDV, S111, S110	CD, S125, S129	CD, S128	CD, S126	CD, S130	CD, S127	CD	CD	MOR				
		Diesel (2.2L)	CDV, S58, S46, S52, S47, S62, S75, S90, S108, S131	CDV, S85, S14	CDV, S18, S22, S33, S34	CDV, S109	CDV, S19, S132		CDV, S55, S56, S59, S63	CDV, S80, S79, S112		CDV				CDV, S86, S87, S93	CDV	CDV	CDV, S84, S107	CDV		CDV, S37	CDV	CDV	CDV	CDV	CDV, S43	CDV				CDV, S54	CDV, S66	CDV, S111, S110	CD, S125, S129	CD, S128	CD, S126	CD, S130	CD, S127	CD	CD	MOR			
	2.0L Petrol GTDi	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	MOR		
2014 - 2015	Diesel 1.4	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	CD	MOR

S1: Reset adaptations

S2: Configuration

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHCM	VIC M	GW M	DD M	DS M	PDM	PSM	ATC M	TCC M	ADC M	SC M	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SODCML	SODCMR	GS M	Manual Oil Reset
-------	------	----------	-----	-----	-----	-----	----	-------	-----	-------	------	-------	------	-----	------	------	-------	------	-------	------	------	------	-----	-----	-------	-------	-------	------	-------	-------------	------	-------	--------	-----	-----	----	-----	-------	------	-------	--------	--------	------	------------------

- S3: Calibration 'G' Sensor
- S4: INSTRUMENT PACK RENEWAL
- S5: Remote key (PLIP) programming
- S6: EKA display
- S7: Read/Set Injector Grades
- S8: Suspension configuration
- S9: SLS suspension calibration
- S10: SLS transfer mode set
- S11: Steering column correction
- S12: Height recalibration
- S13: Headlight calibration
- S14: Adaption clear
- S15: Rain sensor initialisation
- S16: Sliding roof module initialisation
- S17: Driver's memory seat calibration
- S18: Steering wheel angle sensor calibration
- S19: Service interval reset
- S20: Drive the parking brake to the mounting position.
- S21: Driver the parking brake to the latching position.
- S22: Longitudinal accelerometer sensor calibration
- S23: Brake bleed.
- S24: Parking brake unjam procedure.
- S25: Rain sensor windshield setup
- S26: Service mode enabled.
- S27: Service mode disabled
- S28: Seat cushion replacement.
- S29: Third button configuration
- S30: Fuel prime routine.
- S31: Gear selector sensor calibration.
- S32: Lateral accelerometer calibration
- S33: Pressure sensor calibration
- S34: Roll rate sensor calibration
- S35: Yaw Rate sensor calibration
- S36: Sunroof calibration
- S37: Driver's door window glass calibration
- S38: Passenger's door window glass calibration

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSM	PACM	AHCM	VICM	GW M	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
-------	------	----------	-----	-----	-----	-----	----	-------	-----	------	------	------	------	-----	------	-----	------	------	------	------	-----	-----	-----	-----	------	------	------	-----	------	-------------	------	-------	-------	-----	-----	----	-----	-------	------	------	--------	--------	-----	------------------

- S39: Driver's seat calibration
- S40: Humidity sensor replacement
- S41: Seat heater module calibration
- S42: Stepper motor replacement
- S43: Air suspension height calibration
- S44: Air suspension deflation
- S45: Air suspension enable
- S46: Diesel particulate filter dynamic regeneration
- S47: Injector replacement
- S48: Diesel fueling adaption re-initialization
- S49: Exhaust gas recirculation replacement
- S50: Diesel particulate filter differential pressure sensor replacement
- S51: Diesel particulate filter air temperature sensor replacement
- S52: Diesel particulate filter replacement
- S53: Diesel lambda sensor replacement
- S54: Seats-Seat cover replacement
- S55: Tire pressure sensor replacement
- S56: Tire pressure monitor confirmation application
- S57: Security - Keyfob remote functionality
- S58: Oil service counter reset
- S59: Battery replacement
- S60: Evaporator and heater test
- S61: Seat entry/exit enable
- S62: Idle speed - Adjustment
- S63: Valet mode reset
- S64: Control module calibration
- S65: Fuel consumption units
- S66: Headlamp control module system calibration
- S67: Message centre display contrast
- S68: Pilot correction learning
- S69: Pre-delivery inspection
- S70: Pump replacement
- S71: Speed limitation
- S72: Program keys
- S73: Boost pressure actuator replacement
- S74: Exhaust gas recirculation valve

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHCM	VIC M	GW M	DD M	DS M	PDM	PS M	ATC M	TCC M	ADC M	SC M	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SODC ML	SODC MR	GS M	Manual Oil Reset
-------	------	----------	-----	-----	-----	-----	----	-------	-----	-------	------	-------	------	-----	------	------	-------	------	-------	------	------	------	-----	------	-------	-------	-------	------	-------	-------------	------	-------	--------	-----	-----	----	-----	-------	------	-------	---------	---------	------	------------------

- S75: Throttle valve actuator
- S76: Oxygen sensor
- S77: Oxidation catalyst
- S78: Crash status reset
- S79: Actuators end stop detection
- S80: Stepper motor initialisation
- S81: Reset water in fuel detection
- S82: Turbine shut-off valve
- S83: Steering column calibration
- S84: Auxiliary heater priming routine
- S85: Transmission control module oil counter reset
- S86: Parking brake pad replacement - Release to service position
- S87: Parking brake pad replacement - Exit maintenance mode application
- S88: Rest of world - Service interval options
- S89: Tire pressure monitor sensor identification display
- S90: Display injector correction factors
- S91: Parking brake activation
- S92: Longitudinal accelerometer calibration
- S93: Brake caliper replacement assembly test
- S94: Fuel pump supply - Enable/disable
- S95: Power steering soft-lock end stops reset routine
- S96: Test dual battery system
- S97: Fuel pump supply - Enable/disable
- S98: Injector valve test
- S99: Oil change reset
- S100: Diesel particulate filter reset
- S101: Exhaust gas recirculation throttle replacement reset
- S102: Set/un-set air suspension manufacturing/freeze mode
- S103: Build mode
- S104: Set/un-set air suspension tight tolerance mode (headlamp setting)
- S105: Speed control alignment
- S106: Service history data
- S107: Auxiliary heater activation test
- S108: Fuel Lift Pump
- S109: Restraints build mode
- S110: Check all antennas

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHC M	HVAC	VDC M	SASM	TPM	PBCM	PSCM	PAC M	AHCM	VIC M	GW M	DD M	DS M	PD M	PS M	ATC M	TCC M	ADC M	SC M	RDC M	Rain Sensor	RBCM	Light	ROCS M	HCM	KVM	GM	AAM	RG/TM	IPMB	AFC M	SODCML	SODCMR	GS M	Manual Oil Reset
-------	------	----------	-----	-----	-----	-----	----	-------	-----	-------	------	-------	------	-----	------	------	-------	------	-------	------	------	------	------	------	-------	-------	-------	------	-------	-------------	------	-------	--------	-----	-----	----	-----	-------	------	-------	--------	--------	------	------------------

- S111: Check passive keys enabled
- S112: Re-program all stepper motors
- S113: Idle speed test
- S114: Solenoid replacement
- S115: Purge valve self test
- S116: Set/un-set air suspension geometry set-up
- S117: Suspension tight tolerance control
- S118: OBDII readiness tests
- S119: Tyre circumference
- S120: Fuel tank volume
- S121: Auxiliary heater fuel delivery test
- S122: Adaption status
- S123: Absolute position sensor replacement
- S124: Front parking aid sensors 'Auto-On' activation
- S125: DVD region counter reset
- S126: Camera auto learn routine
- S127: Side object detection mode history
- S128: Tailgate(trunk) calibration
- S129: Calibrate dynamic volume control
- S130: Navigation reset
- S131: Adaptive fuel trim display
- S132: Vehicle reset
- S133: Transportation mode
- S134: Throttle valve actuator replacement
- S135: Tire pressure monitor transmitter functionality
- S136: Ride level control module inflation (showroom)
- MOR: Manually Reset Service
- S137: Verify Keys
- S138: Activate telematics control module
- S139: Automatic high beam camera calibration
- S140: Dynamic safety belt retract and release
- S141: Emergency call and breakdown call switch illumination test
- S142: Network registration status
- S143: Operational mode
- S144: Parking aid switch-Enable/disable
- S145: Passenger's seat calibration

LANDROVER V32.60 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM	ABS	SRS	IP	RLC M	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GW M	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Lght	ROCSM	HCM	KVM	GM	AAM	RG/TM	IPMB	AFCM	SODCML	SODCMR	GS M	Manual Oil Reset
-------	------	----------	-----	-----	-----	-----	----	-------	-----	------	------	------	------	-----	------	------	------	------	------	------	-----	-----	-----	-----	------	------	------	-----	------	-------------	------	------	-------	-----	-----	----	-----	-------	------	------	--------	--------	------	------------------

- S146: Pre-activate telematics control module
- S147: Rear seat-calibration-Left
- S148: Rear seat calibration Right
- S149: Reset compressor protection counter
- S150: Recover programmed keys
- S151: Clear/reset WIFI hotspot
- S152: Seat climate control module calibration
- S153: Telematics control module battery replacement reset
- S154: Telematics server communication check
- S155: Telematics sim card type
- S156: Test internal backup battery
- S157: Quiescent current control module internal check
- S158: Height ReCalibration