

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Fabia I	1996 > 2008	6Y	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			44 Steering assistance	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Citigo	2011 >	NF	19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance Sys	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
5F Information Electronic Equipm	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Citigo	2011 >	AA	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance Sys	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipm	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Fabia II	2007>2010	5J	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			44 Steering assistance	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Fabia	2011 >	5J	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance Sys	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipm	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Felicia	1995>2001	6U	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			41 Diesel pump electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Octavia I	1997>2011	1U	22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			29 Left light control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			36 Driver`s side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			39 Right light control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Octavia II	2004>2013	1Z	01 Engine electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			02 Transmission Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			03 Brake Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			08 AC/Heating electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			10 Parking Assist System 2	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,S05,S06
			18 Aux heating	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			19 Gateway data bus	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			22 4WD Electronics	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			25 Immobilizer	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			36 Driver`s side seat adj.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			37 Navigation	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			3D Special Function	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			44 Steering assistance	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			46 Central Control Module	B01,B02,B03,B04,B07,S01,S02,S03,S05,S08
			47 Soundsystem	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			55 Headlight range control	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			56 Radio	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			57 TV-TUNER	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			69 TRAILER FUNCTION	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			76 Parking aid	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			77 TELEPHONE	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			7D Auxiliary Heater	B01,B02,B03,B04,B07,S01,S02,S03,S05,S06
			Octavia	2013 >
02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
15 Airbags	B01,B02,B03,B04			
16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
17 Instrument cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Octavia	2013 >	NE	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Rapid	2013 >	NH	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			3C Lane Departure Assistance Sys	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			5F Information Electronic Equipm	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			Roomster	2006>2010
02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
15 Airbags	B01,B02,B03,B04			
16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			
19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09			

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			44 Steering assistance	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			77 TELEPHONE	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
			56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Skoda **V27.10** Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions			
Roomster	2011 >	5J	65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			07 DISPLAY-/CNTL UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			3C Lane Departure Assistance Sys	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			5F Information Electronic Equipm	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
			61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08			
						01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
						02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09						
08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09						
15 Airbags	B01,B02,B03,B04						
16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09						
17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09						

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Superb I	2002>2008	3U	19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			36 Driver`s side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			47 Soundsystem	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
			76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Superb II	2008>	3T	01 Engine electronics	B01,B02,B03,B04,S01,S02,S03
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03
			10 Parking Assist System 2	B01,B02,B03,B04,S01,S02,S03
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03
			17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03
			22 4WD Electronics	B01,B02,B03,B04,S01,S02,S03
			25 Immobilizer	B01,B02,B03,B04,S01,S02,S03
			2E Media player position 3	B01,B02,B03,B04,S01,S02,S03
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03
			37 Navigation	B01,B02,B03,B04,S01,S02,S03

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			3D Special Function	B01,B02,B03,B04,S01,S02,S03
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03
			44 Steering assistance	B01,B02,B03,B04,S01,S02,S03
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03
			4F Electronic central electric II	B01,B02,B03,B04,S01,S02,S03
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03
			56 Radio	B01,B02,B03,B04,S01,S02,S03
			57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03
			69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03
			72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03
			76 Parking aid	B01,B02,B03,B04,S01,S02,S03
			77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03
			7D Auxiliary Heater	B01,B02,B03,B04,S01,S02,S03
			01 Engine electronics	B01,B02,B03,B04,S01,S02,S03
			02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03
			03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03
			08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03
			09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03
			10 Parking Assist System 2	B01,B02,B03,B04,S01,S02,S03
			15 Airbags	B01,B02,B03,B04
			16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
Yeti	2010>	5L	17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03
			18 Aux heating	B01,B02,B03,B04,S01,S02,S03
			19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03
			22 4WD Electronics	B01,B02,B03,B04,S01,S02,S03
			25 Immobilizer	B01,B02,B03,B04,S01,S02,S03
			2E Media player position 3	B01,B02,B03,B04,S01,S02,S03
			36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03
			37 Navigation	B01,B02,B03,B04,S01,S02,S03
			3D Special Function	B01,B02,B03,B04,S01,S02,S03
			42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03
			44 Steering assistance	B01,B02,B03,B04,S01,S02,S03
			46 Central Control Module	B01,B02,B03,B04,S01,S02,S03
			47 Soundsystem	B01,B02,B03,B04,S01,S02,S03
			4F Electronic central electric II	B01,B02,B03,B04,S01,S02,S03
			52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03
			55 Headlight range control	B01,B02,B03,B04,S01,S02,S03
			56 Radio	B01,B02,B03,B04,S01,S02,S03
			62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03
69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03			
72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03			
77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03			
NOTE:				
Basic Functions		Special Functions		
B01: Control Unit Info		S01: Output Tests		

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			B02: Read Fault Codes	S02: Basic Settings
			B03: Clear Fault Codes	S03: Adaptation
			B04: Measuring Blocks (Live Data)	S04: Login
			B05: Read FreFrame	S05: Access permission
			B06: Readiness	S06: Coding II
			B07: identification services	S07: Code Module
			B08: Single Reading	S08: Long Code
				S09: Chassis Number adjustment

NOTE: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

Skoda **V27.10** Diagnostics List (Note:For reference only)

Year	System Type	Protocol	Systems	Functions
			01 Engine electronics	
			11 Engine electronics 2	
			21 Engine electronics 3	
			02 Transmission Electronics	
			03 Brake Electronics	
			08 AC/Heating electronics	
			25 Immobilizer	
			47 Soundsystem	
			12 Clutch electronics	
			34 Self leveling suspension	
			15 Airbags	

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			16 Steering Wheel Electronics	
			44 Steering assistance	
			35 Central Locking	
			14 Wheel damping electronics	
			17 Instrument Cluster	
			18 Aux heating	
			13 Distance control	
			19 Gateway data bus	
			26 Electric roof control	
			29 Left light control	
			39 Right light control	
			37 Navigation	
			45 Interior Monitoring	
			46 Central Control Module	
			49 Auto. Lighting switch	
			51 Electric drive	
			61 Battery control	
			75 Emergency call module	
			76 Parking aid	
			09 Electronic Ctrl Electronics	
			22 4WD Electronics	
			24 Drive slip control	
			36 Driver`s side seat adj.	
			41 Diesel pump electronics	
			55 Headlight range control	

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
		BOSCH	56 Radio	
			65 Tyre pressure monitoring	
			66 Seat-/mirror adjust.	
			71 Battery charger	
			42 DRIVER-DOOR ELECT.	B01: Control Unit Info
			52 PASSE.-DOOR ELECT.	B02: Read Fault Codes
			62 LR-DOOR ELECTRONI.	B03: Clear Fault Codes
			72 RR-DOOR ELECTRONI.	B04: Measuring Blocks (Live Data)
			23 BRAKER BOOSTER	B05: Read FreFrame
			43 BRAKER BOOST.ASSI.	B06: Readiness
			63 DRVS BOARDING ASS1	B07: identification services
			73 DRVS BOARDING ASS2	B08: Single Reading
			54 Rear spoiler	S01: Output Tests
			05 ACCESS & PERMISSI.	S02: Basic Settings
			06 PASSENE. SEAT ADJ.	S03: Adaptation
			07 DISPLAY-/CNTL UNIT	S04: Login
			27 DIS./CTL UNIT REAR	S05: Access permission
			57 TV-TUNER	S06: Coding II
			67 VOICE CONTROL	S07: Code Module
			77 TELEPHONE	S08: Long Code
			38 ROOF ELECTRONICS	S09: Chassis Number adjustment
			48 DRVS SEAT ADJ.REAR	
			68 WIPER ELECTRONICS	
		78 SLIDING DOOR		
		59 TOWING PROTECTION		

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			69 TRAILER FUNCTION	
			28 Climate Control Unit Rear	
			31 Engine Electronics Conjunct.	
			32 Locking Electronisc	
			53 Parking Brake	
			58 Auxiliary Fuel Tank	
			64 Stabilizers	
			1C Vehicle Position Detection	
			2D Voice Amplification	
			3D Special Function	
			6E Roof Display/Control Head	
			7E Ind.Unit in Inst.Panel Ins.	
			0D Sliding Door Left	
			7D Auxiliary Heater	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
			5C Lane Keeping Assistance System	
			6C Rear Camera	

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			5D Opertion	
			6D Electronic Equipment of Trunk Lid	
			0B Auxiliary Air Heater	
			5F Information Electronic Equipment 1	
			6F Confort Central Control Unit II	
			1B Power-Assisted Steering	
			10 Parking Assist System 2	
			BF Sliding Door Right	
	Without CAN BUS		01 Engine electronics	
			11 Engine electronics 2	
			21 Engine electronics 3	
			02 Transmission Electronics	
			03 Brake Electronics	
			08 AC/Heating electronics	
			25 Immobilizer	
			47 Soundsystem	
			12 Clutch electronics	
			34 Self leveling suspension	
			15 Airbags	
			16 Steering Wheel Electronics	
			44 Steering assistance	
			35 Central Locking	
			14 Wheel damping electronics	

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
before 2007			17 Instrument Cluster	
			18 Aux heating	
			13 Distance control	
			19 Gateway data bus	
			26 Electric roof control	
			29 Left light control	
			39 Right light control	
			37 Navigation	
			45 Interior Monitoring	
			46 Central Control Module	
			49 Auto. Lighting switch	
			51 Electric drive	
			61 Battery control	
			75 Emergency call module	
			76 Parking aid	
			09 Electronic Ctrl Electronics	
			22 4WD Electronics	
			24 Drive slip control	
			36 Driver`s side seat adj.	
			41 Diesel pump electronics	
55 Headlight range control				
56 Radio				
65 Tyre pressure monitoring				
66 Seat-/mirror adjust.				
71 Battery charger				

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
2007		KWP 2	42 DRIVER-DOOR ELECT.	01 Control Unit Info 02 Read Fault Codes 08 Measuring Blocks (Live Data) 05 Clear Fault Codes 04 Basic Settings 03 output tests 10 adaptation 11 code module 16 Access permission
			52 PASSE.-DOOR ELECT.	
			62 LR-DOOR ELECTRONI.	
			72 RR-DOOR ELECTRONI.	
			23 BRAKER BOOSTER	
			43 BRAKER BOOST.ASSI.	
			63 DRVS BOARDING ASS1	
			73 DRVS BOARDING ASS2	
			54 Rear spoiler	
			05 ACCESS & PERMISSI.	
			06 PASSENE. SEAT ADJ.	
			07 DISPLAY-/CNTL UNIT	
			27 DIS./CTL UNIT REAR	
			57 TV-TUNER	
			67 VOICE CONTROL	
			77 TELEPHONE	
			38 ROOF ELECTRONICS	
			48 DRVS SEAT ADJ.REAR	
			68 WIPER ELECTRONICS	
			78 SLIDING DOOR	
			59 TOWING PROTECTION	
			69 TRAILER FUNCTION	
			28 Climate Control Unit Rear	
			31 Engine Electronics Conjunct.	
			32 Locking Electronisc	

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			53 Parking Brake	
			58 Auxiliary Fuel Tank	
			64 Stabilizers	
			1C Vehicle Position Detection	
			2D Voice Amplification	
			3D Special Function	
			6E Roof Display/Control Head	
			7E Ind.Unit in Inst.Panel Ins.	
			0D Sliding Door Left	
			7D Auxiliary Heater	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
			5C Lane Keeping Assistance System	
			6C Rear Camera	
			5D Opertion	
			6D Electronic Equipment of Trunk Lid	
			0B Auxiliary Air Heater	

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			5F Information Electronic Equipment 1	
			6F Confort Central Control Unit II	
			1B Power-Assisted Steering	
			10 Parking Assist System 2	
			BF Sliding Door Right	
			01 Engine electronics	
			11 Engine electronics 2	
			44 Steering assistance	
			05 ACCESS & PERMISSI.	
			21 Engine electronics 3	
			31 Engine Electronics Conjunct.	
			61 Battery control	
			02 Transmission Electronics	
			22 4WD Electronics	
			42 DRIVER-DOOR ELECT.	
			52 PASSE.-DOOR ELECT.	
			62 LR-DOOR ELECTRONI.	
			72 RR-DOOR ELECTRONI.	
			03 Brake Electronics	
			13 Distance control	
			53 Parking Brake	
			34 Self leveling suspension	
			15 Airbags	
			25 Immobilizer	

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			55 Headlight range control	
			65 Tyre pressure monitoring	
			75 Emergency call module	
			06 PASSENE. SEAT ADJ.	
			16 Steering Wheel Electronics	
			26 Electric roof control	
			36 Driver`s side seat adj.	
			46 Central Control Module	
			56 Radio	
			66 Seat-/mirror adjust.	
			76 Parking aid	
			1D Driver identification	
			3D Special Function	
			07 DISPLAY-/CNTL UNIT	
			17 Instrument Cluster	
			37 Navigation	01 Control Unit Info
			47 Soundsystem	02 Read Fault Codes
			57 TV-TUNER	08 Measuring Blocks (Live Data)
			67 VOICE CONTROL	05 Clear Fault Codes
			77 TELEPHONE	04 Basic Settings
			0E Media player position 1	03 output tests
			1E Media player position 2	10 adaptation
			2E Media player position 3	11 code module
			3E Media player position 4	16 Access permission
			4E Control head RR	Long Code
	CAN BUS	CAN BU		

Skoda V27.10 Diagnostics List(Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			5E Control head LR	identification services
			7E Ind.Unit in Inst.Panel Ins.	
			08 AC/Heating electronics	
			18 Aux heating	
			28 Climate Control Unit Rear	
			38 ROOF ELECTRONICS	
			7D Auxiliary Heater	
			09 Electronic Ctrl Electronics	
			19 Gateway data bus	
			69 TRAILER FUNCTION	
			0F Radio Tuner-Digital	
			1F Radio Satellite	
			2F TV Tuner-Digital	
			4F Electronic central electric II	
			04 Steering Position	
			74 Vehicle Control System	
			3C Lane Departure Assistance System	
			4C Tyre Pressure Monitor II	
			5C Lane Keeping Assistance System	
			6C Rear Camera	
			5D Opertion	
			6D Electronic Equipment of Trunk Lid	

Skoda **V27.10** Diagnostics List (Note:For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
			0B Auxiliary Air Heater	
			5F Information Electronic Equipment 1	
			6F Confort Central Control Unit II	
			1B Power-Assisted Steering	
			10 Parking Assist System 2	
			20 High Beam Assistance Device	
			30 Special Function 2	
			BF Sliding Door Right	
		CAN B		Collection services

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD

CONNECTOR	X431/TOOL	DIAG UN
OBD 16C	Skoda Model of non-CAN BUS protocol	N/A
CANBUS II	All Skoda Models with 16PIN DLC	N/A
SUPER 16	All Skoda Models with 16PIN DLC	N/A

Skoda V27.10 Diagnostics List (Note: For reference only)

MODEL	YEAR	TYPE	SYSTEMS	Functions
diagun connector	N/A	All Skoda Mode ls with 16PIN DLC		